Technical Support Setup Procedure

FAQ : How to Manually Configure Wireless Settings for DIR-605L

Release date : 12/04/2012

Model Support : DIR-605L

H/W:A1

S/W:1.00

D-Link® Technical Support Setup Procedure

วิธีการตั้งค่าการใช้งานเครือข่ายไร้สายแบบ Manual สำหรับ DIR-605L ทำได้อย่างไร

Note: กรุณาใช้เฉพาะการเชื่อมต่อชนิดใช้สาย สำหรับการตั้งค่านี้

** ยกเลิกการใช้งาน firewall (Disable Firewall) ในเครื่องคอมพิวเตอร์ของคุณเพื่อหลีกเลี่ยงปัญหาที่เกี่ยวกับการ login **

ขั้นตอนที่ 1 : เชื่อมต่อเครื่องคอมพิวเตอร์(แล็บท็อป)ของคุณไปยังเราเตอร์ (พอร์ต 1,2,3,4 พอร์ตใดพอร์ตหนึ่ง) โดยการใช้สายเคเบิ้ล

ขั้นตอนที่ 2 : เรียกใช้งาน IE (Internet explorer) ของคุณ และใส่ 192.168.0.1 ลงช่อง address และให้ทำการกด Enter คุณอาจเข้าเรียกใช้งานผ่าน http://dlinkrouter

ขั้นตอนที่ 3 : พิมพ์บัญชีผู้ใช้ (Username) : **admin** และรหัสผ่าน เป็นช่องว่าง คลิ๊กบนปุ่ม Login

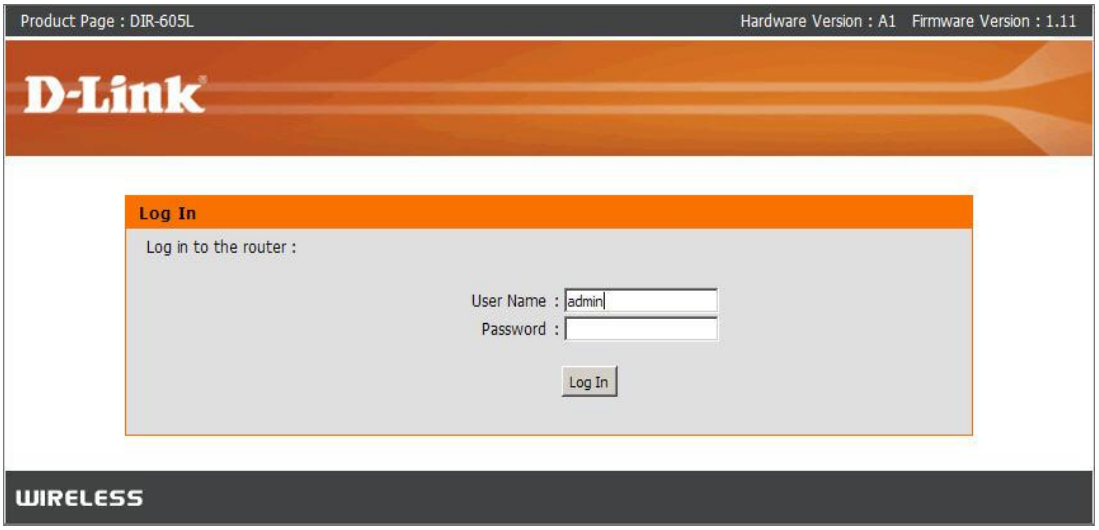

ขั้นตอนที่ 4 : คลิ๊กปุ่ม Manual Setup ที่อยู่ทางด้านล่าง

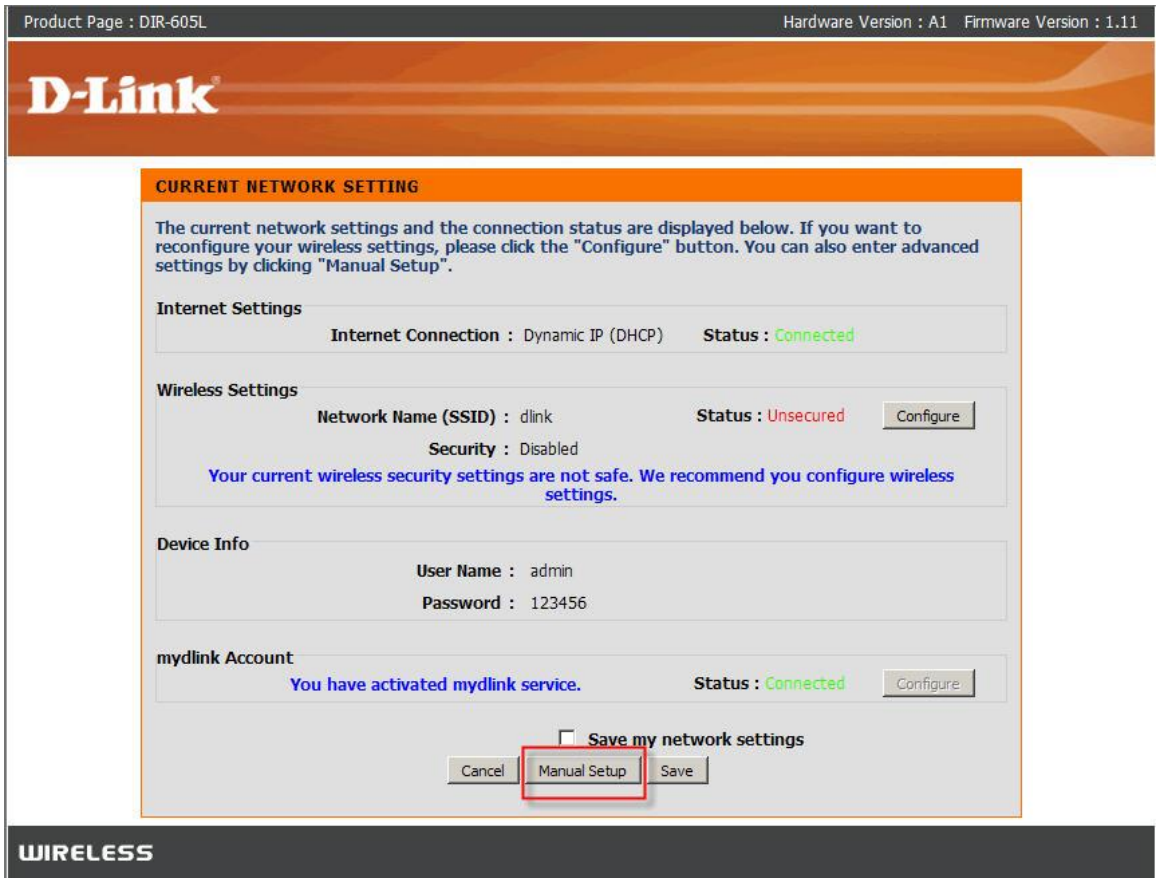

ขั้นตอนที่ 5 : เปลี่ยนแปลงค่าของชื่อของเครือข่ายไร้สายจากค่าที่ตั้งจากโรงงาน
เป็นชื่อที่คุณต้องการ

เลือกระบบความปลอดภัยได้จาก WEP หรือ WPA

สำหรับระบบรักษาความปลอดภัยแบบ **WPA**

- เลือก **Enable WPA Only Wireless Security (Enhanced)** บน **Security Mode** บนช่องตัวเลือก **(drop down box)**
- พิมพ์รหัสผ่าน **(password)** ของคุณ บนช่อง **Network Key**
- คลิ๊กบนปุ่ม **Save Settings** เมื่อตั้งค่าเรียบร้อยแล้ว

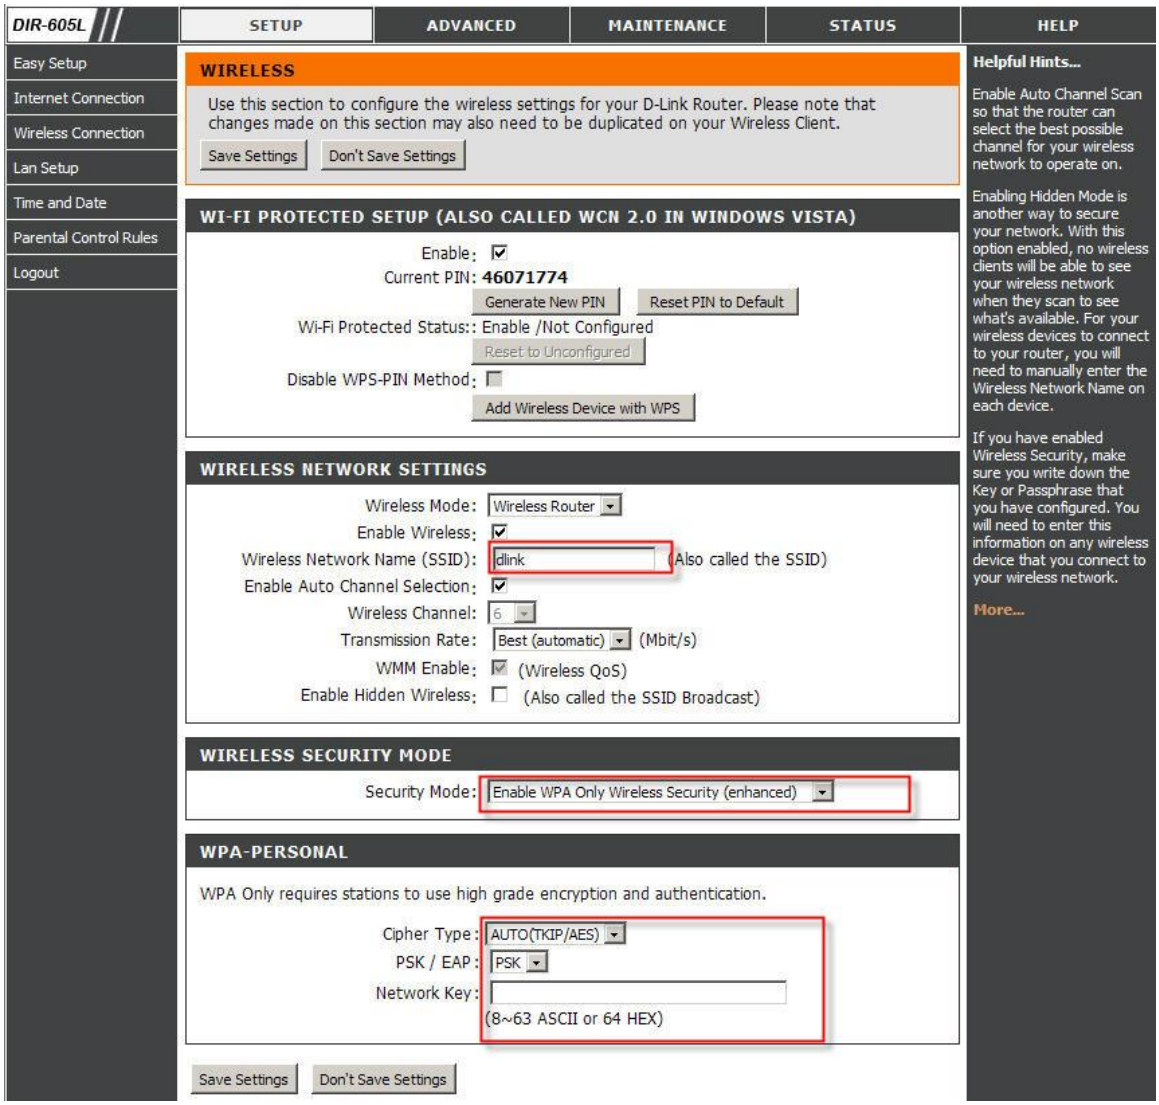
DIR-605L
SETUP
ADVANCED
MAINTENANCE
STATUS
HELP
Easy Setup
Internet Connection
Wireless Connection
Lan Setup
Time and Date
Parental Control Rules
Logout
WIRELESS
Use this section to configure the wireless settings for your D-Link Router. Please note that changes made on this section may also need to be duplicated on your Wireless Client.
Save Settings
Don't Save Settings
WI-FI PROTECTED SETUP (ALSO CALLED WCN 2.0 IN WINDOWS VISTA)
Enable:
Current PIN: 46071774
Generate New PIN
Reset PIN to Default
Wi-Fi Protected Status:: Enable /Not Configured
Reset to Unconfigured
Disable WPS-PIN Method:
Add Wireless Device with WPS
WIRELESS NETWORK SETTINGS
Wireless Mode: Wireless Router
Enable Wireless:
Wireless Network Name (SSID): dlink (Also called the SSID)
Enable Auto Channel Selection:
Wireless Channel: 6
Transmission Rate: Best (automatic) (Mbit/s)
WMM Enable: (Wireless QoS)
Enable Hidden Wireless: (Also called the SSID Broadcast)
WIRELESS SECURITY MODE
Security Mode: Enable WPA Only Wireless Security (enhanced)
WPA-PERSONAL
WPA Only requires stations to use high grade encryption and authentication.
Cipher Type: AUTO(TKIP/AES)
PSK / EAP: PSK
Network Key:
(8~63 ASCII or 64 HEX)
Save Settings
Don't Save Settings
Helpful Hints...
Enable Auto Channel Scan so that the router can select the best possible channel for your wireless network to operate on.
Enabling Hidden Mode is another way to secure your network. With this option enabled, no wireless clients will be able to see your wireless network when they scan to see what's available. For your wireless devices to connect to your router, you will need to manually enter the Wireless Network Name on each device.
If you have enabled Wireless Security, make sure you write down the Key or Passphrase that you have configured. You will need to enter this information on any wireless device that you connect to your wireless network.
More...

สำหรับระบบรักษาความปลอดภัยแบบ **WEP**

- เลือก **Enable WEP Wireless Security (basic)** บน **Security Mode** บนช่องตัวเลือก **(drop down box)**
- พิมพ์รหัสผ่าน **(password)** ของคุณ บนช่อง **Network Key**
- คลิ๊กบนปุ่ม **Save Settings**

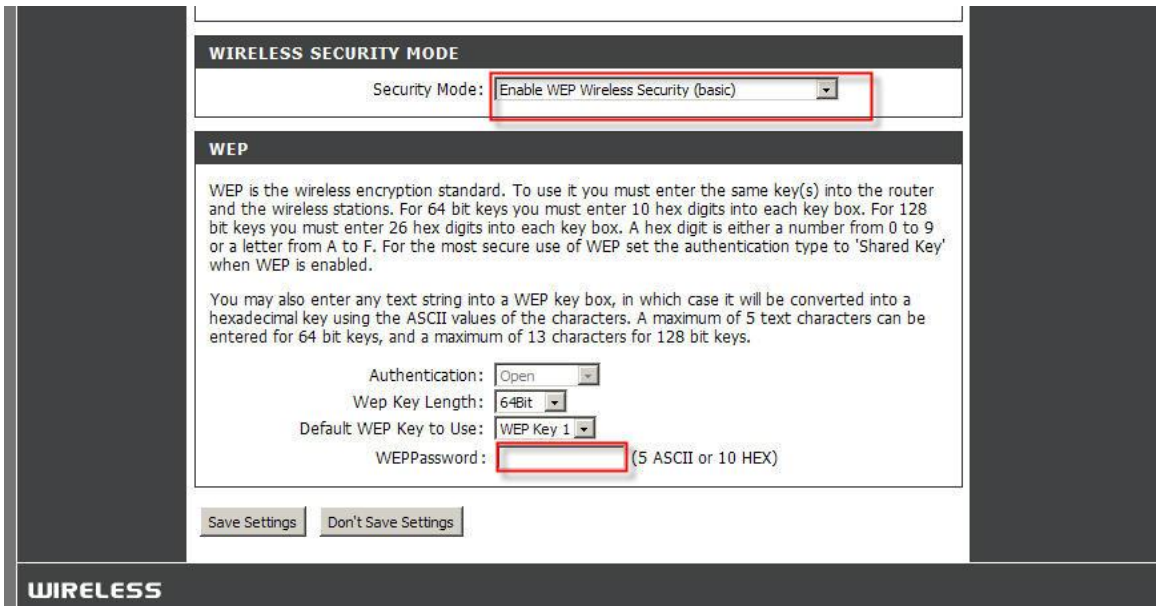
WIRELESS SECURITY MODE
Security Mode: Enable WEP Wireless Security (basic)
WEP
WEP is the wireless encryption standard. To use it you must enter the same key(s) into the router and the wireless stations. For 64 bit keys you must enter 10 hex digits into each key box. For 128 bit keys you must enter 26 hex digits into each key box. A hex digit is either a number from 0 to 9 or a letter from A to F. For the most secure use of WEP set the authentication type to 'Shared Key' when WEP is enabled.
You may also enter any text string into a WEP key box, in which case it will be converted into a hexadecimal key using the ASCII values of the characters. A maximum of 5 text characters can be entered for 64 bit keys, and a maximum of 13 characters for 128 bit keys.
Authentication: Open
Wep Key Length: 64Bit
Default WEP Key to Use: WEP Key 1
WEPPassword: (5 ASCII or 10 HEX)
Save Settings
Don't Save Settings
WIRELESS

Technical Support Setup Procedure

How to Manually Configure Wireless Settings for DIR-605L

Please note use only hard-wired network connections, to do the setting.
*** Disable firewall in your PC to avoid login problem****

Step 1: Connect Your PC (Laptop) to the Router (Port 1,2,3,4 either one of them) using Network cable.

Step 2: Launch your IE (Internet explorer) and key in 192.168.0.1 in the address column and press enter. You may also access via http://dlinkrouter

Step 3: Enter your Username: a*dmin* and leave the password blank then Click on Log In.

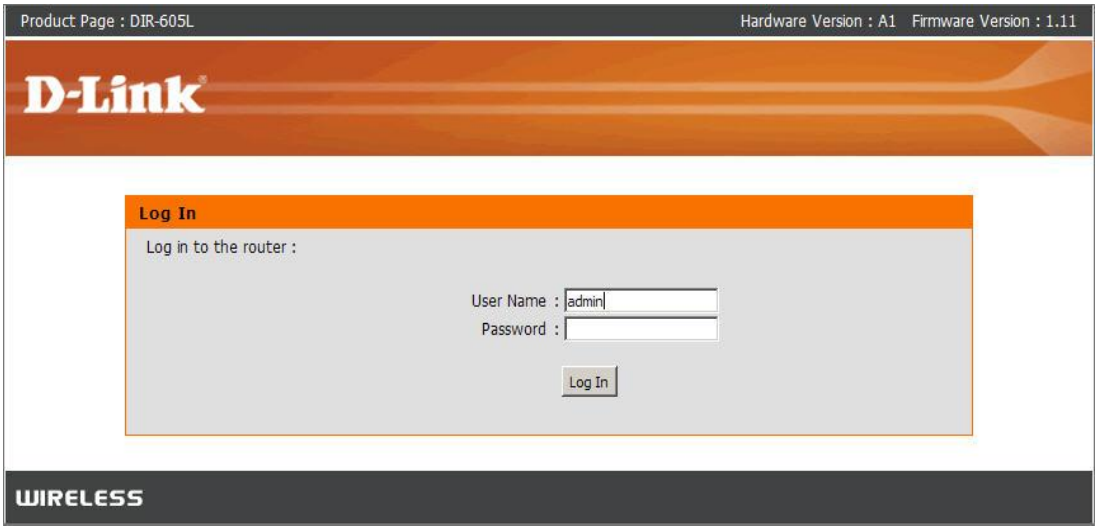

Step 4: Click **Manual Setup** button at the bottom.

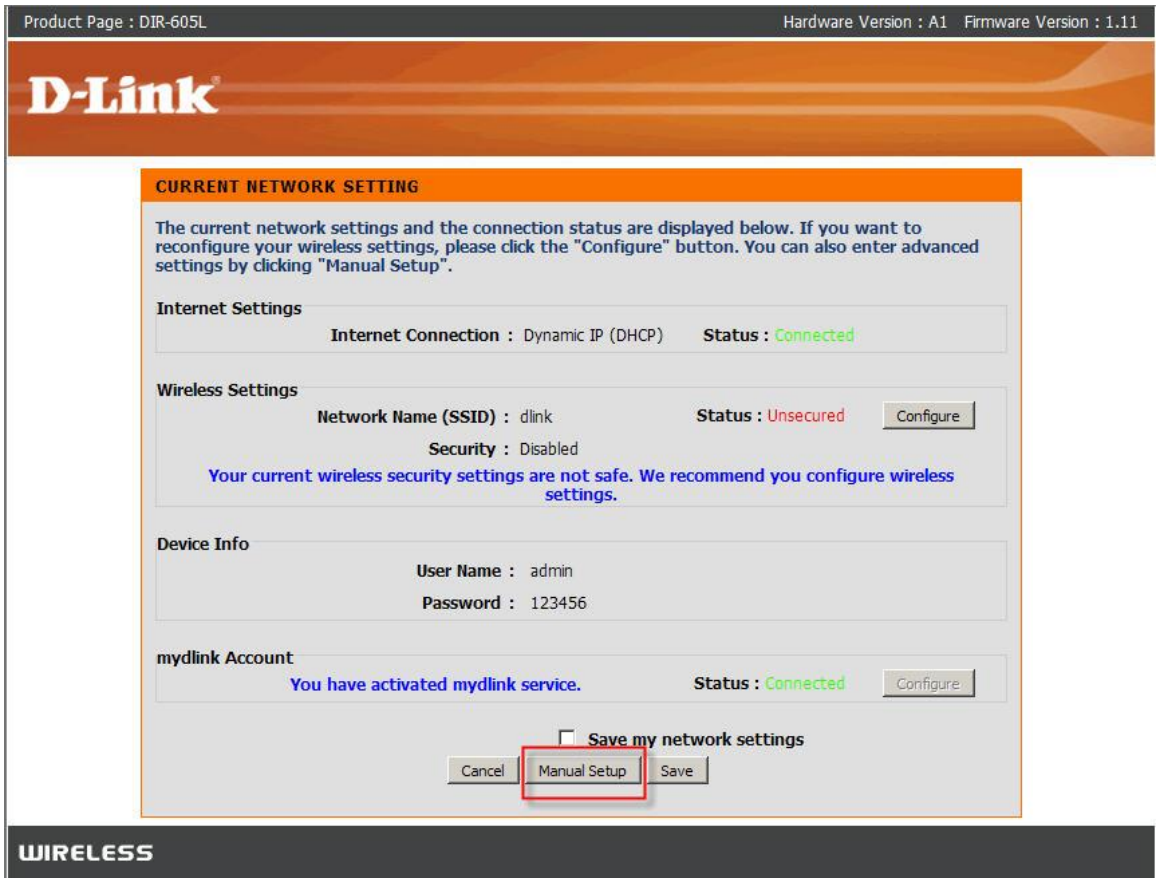
Product Page : DIR-605L
Hardware Version : A1 Firmware Version : 1.11
D-Link
CURRENT NETWORK SETTING
The current network settings and the connection status are displayed below. If you want to reconfigure your wireless settings, please click the "Configure" button. You can also enter advanced settings by clicking "Manual Setup".
Internet Settings
Internet Connection : Dynamic IP (DHCP)
Status : Connected
Wireless Settings
Network Name (SSID) : dlink
Status : Unsecured
Configure
Security : Disabled
Your current wireless security settings are not safe. We recommend you configure wireless settings.
Device Info
User Name : admin
Password : 123456
mydlink Account
You have activated mydlink service.
Status : Connected
Configure
Save my network settings
Cancel
Manual Setup
Save
WIRELESS

Step 5: Change the default wireless network name to your preference.

Select the security method, either WEP or WPA:

For WPA Security:

- Select **Enable WPA Only Wireless Security (Enhanced)** on the Security mode on the drop down box.
- Type your password on the Network key box
- Click on **Save Settings** button when finish.

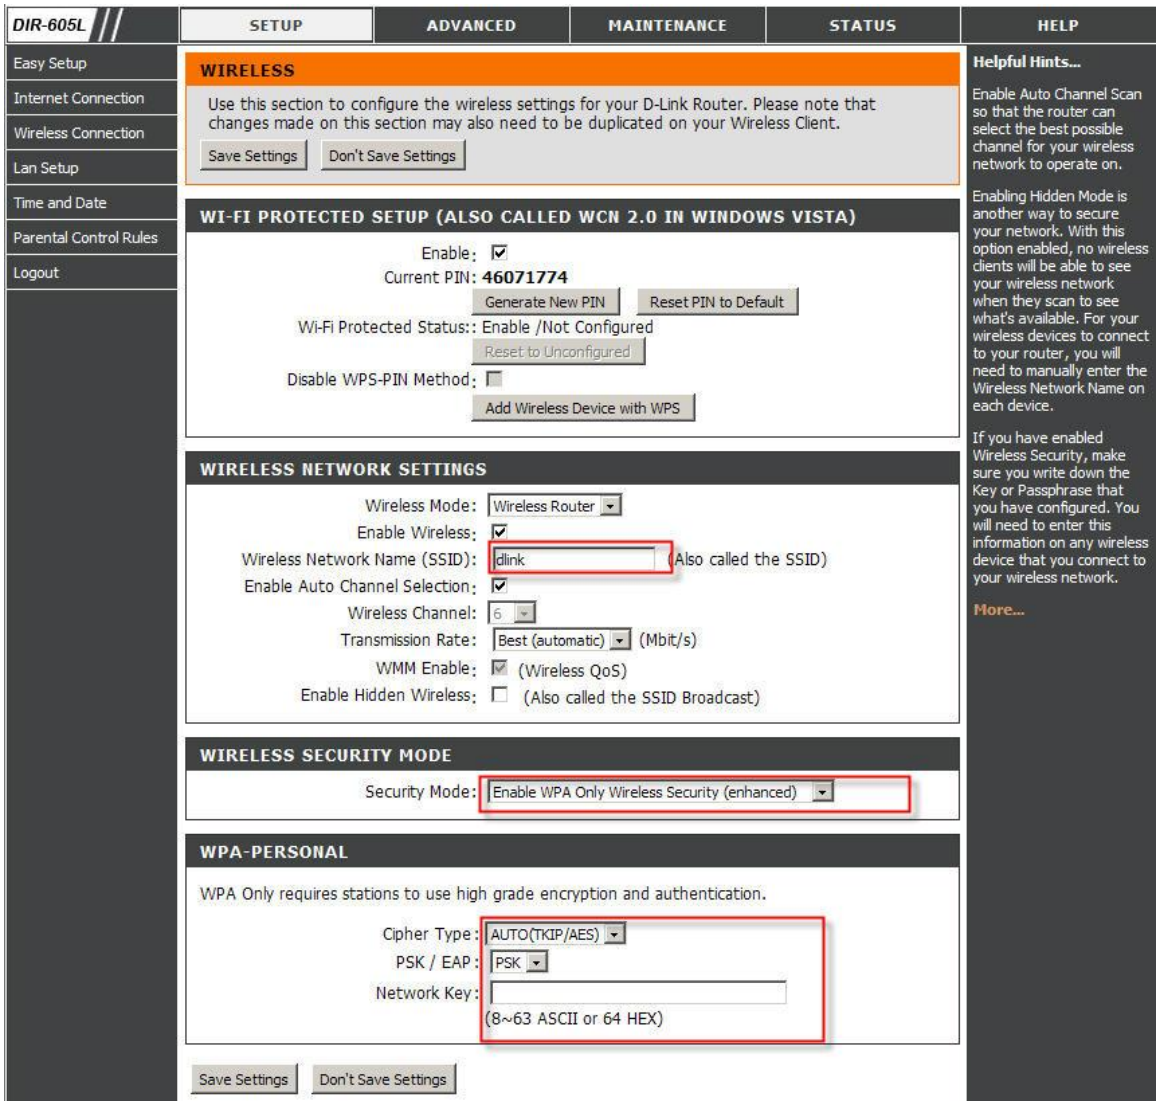
DIR-605L
SETUP
ADVANCED
MAINTENANCE
STATUS
HELP
Easy Setup
Internet Connection
Wireless Connection
Lan Setup
Time and Date
Parental Control Rules
Logout
WIRELESS
Use this section to configure the wireless settings for your D-Link Router. Please note that changes made on this section may also need to be duplicated on your Wireless Client.
Save Settings
Don't Save Settings
WI-FI PROTECTED SETUP (ALSO CALLED WCN 2.0 IN WINDOWS VISTA)
Enable:
Current PIN: 46071774
Generate New PIN
Reset PIN to Default
Wi-Fi Protected Status:: Enable /Not Configured
Reset to Unconfigured
Disable WPS-PIN Method:
Add Wireless Device with WPS
WIRELESS NETWORK SETTINGS
Wireless Mode: Wireless Router
Enable Wireless:
Wireless Network Name (SSID): dlink (Also called the SSID)
Enable Auto Channel Selection:
Wireless Channel: 6
Transmission Rate: Best (automatic) (Mbit/s)
WMM Enable: (Wireless QoS)
Enable Hidden Wireless: (Also called the SSID Broadcast)
WIRELESS SECURITY MODE
Security Mode: Enable WPA Only Wireless Security (enhanced)
WPA-PERSONAL
WPA Only requires stations to use high grade encryption and authentication.
Cipher Type: AUTO(TKIP/AES)
PSK / EAP: PSK
Network Key:
(8~63 ASCII or 64 HEX)
Save Settings
Don't Save Settings
Helpful Hints...
Enable Auto Channel Scan so that the router can select the best possible channel for your wireless network to operate on.
Enabling Hidden Mode is another way to secure your network. With this option enabled, no wireless clients will be able to see your wireless network when they scan to see what's available. For your wireless devices to connect to your router, you will need to manually enter the Wireless Network Name on each device.
If you have enabled Wireless Security, make sure you write down the Key or Passphrase that you have configured. You will need to enter this information on any wireless device that you connect to your wireless network.
More...

For WEP Security:

FAQ : How to Manually Configure Wireless Settings for DIR-605L

- Select **Enable WEP Wireless Security (basic)** on the Security mode on the drop down box.
- Then type your password on the WEP Password box.
- Click on **Save Settings** button.

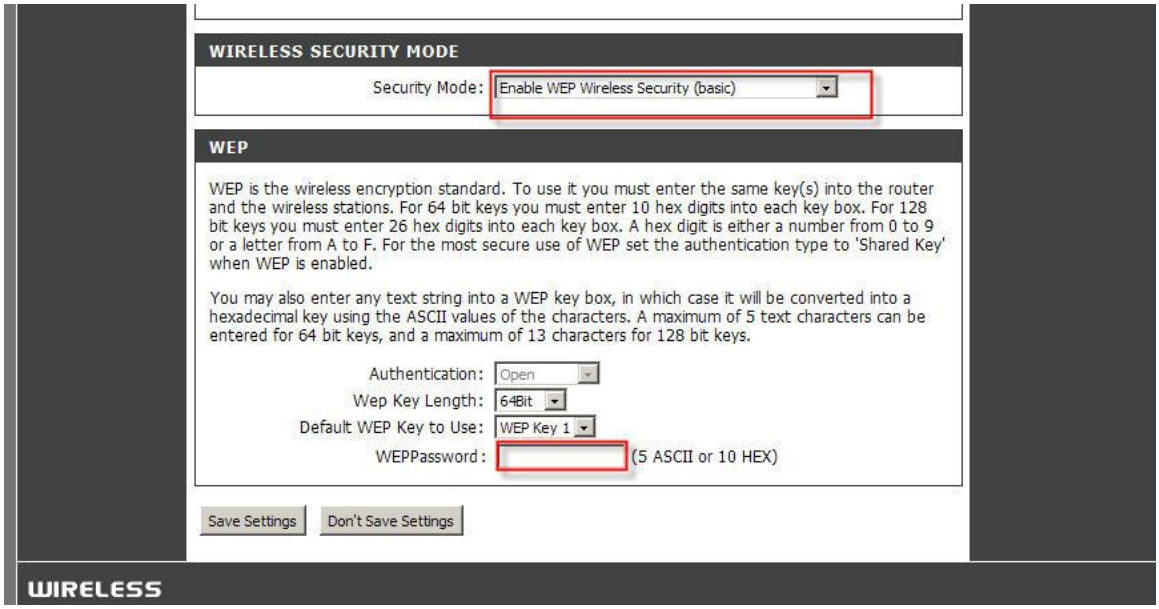
WIRELESS SECURITY MODE
Security Mode:
Enable WEP Wireless Security (basic)
WEP
WEP is the wireless encryption standard. To use it you must enter the same key(s) into the router and the wireless stations. For 64 bit keys you must enter 10 hex digits into each key box. For 128 bit keys you must enter 26 hex digits into each key box. A hex digit is either a number from 0 to 9 or a letter from A to F. For the most secure use of WEP set the authentication type to 'Shared Key' when WEP is enabled.
You may also enter any text string into a WEP key box, in which case it will be converted into a hexadecimal key using the ASCII values of the characters. A maximum of 5 text characters can be entered for 64 bit keys, and a maximum of 13 characters for 128 bit keys.
Authentication:
Open
Wep Key Length:
64Bit
Default WEP Key to Use:
WEP Key 1
WEPPassword:
(5 ASCII or 10 HEX)
Save Settings
Don't Save Settings
WIRELESS

ฝ่ายสนับสนุนทางด้านเทคนิค

Call Center หมายเลขโทรศัพท์ 02-6617997

ภาษาไทย : จันทร์ ถึง ศุกร์ เวลา 9.00 น. – 18.00 น.

Thai : Mon – Fri : Time 9.00 – 18.00.

ภาษาอังกฤษ : เสาร์ , อาทิตย์ , วันหยุดนขัตฤกษ์ และ วันธรรมดา หลัง 18.00 น.

English : Sat – Sun , Public Holiday and after 18.00 weekday.

Website : www.dlink.co.th

email: support@dlink.com.sg

Facebook : http://www.facebook.com/DLinkThailandFans

Nationwide D-Link Service Centres :

Chiang Mai Branch
2/1 Moo 3, Chiang Mai-Lampang Road
Tumbon Chang Pueak, Amphoe Mueang Chiang Mai
Changwat Chiang Mai 50300,
Thailand

Tel : +66 (0) 5340-9482-6
Fax : +66 (0) 5340-9486
Operating hours:
Mondays till Friday
9am to 6pm

Phitsanulok Branch
117/7 Praongdam Road
Tumbon Nai Mueang,
Amphoe Mueang Phitsanulok
Changwat Phitsanulok 65000, Thailand

Tel : +66 (0) 5521-2323-5
Fax : +66 (0) 5521-2326
Operating hours:
Mondays till Friday
9am to 6pm

Charn Issara Tower II
3rd Floor, Charn Issara Tower II
2922/138 New Perchburi Road
Khwang Bangkapi, Khet Huay-Kwang,
Bangkok 10320, Thailand

Tel : +66 (0) 2308-2040
Fax : +66 (0) 2308-2024
Call Center : +66 (0) 2716-6669
Operating hours:
Mondays till Friday
9am to 6pm

Pantip Plaza Branch
4th Fl. Pantip Plaza 604/3 Petchburi Road Room
439-440
Kwang Thanon Petchburi, Khet Ratchathewi
Bangkok 10400, Thailand
Tel : +66 (0) 2656 6037
Tel : +66 (0) 2656 6054
Fax : +66 (0) 2656 6042
Operating hours:
Mondays till Sunday
10am to 7pm

Rayong Branch
217/24 Sukhumvit Road
Tumbon Noen Phra,
Amphoe Mueang Rayong
Changwat Rayong 21000, Thailand

Tel : +66 (0) 3880-0631-3
Fax : +66 (0) 3880-0634
Operating hours:
Mondays till Sunday
9am to 6pm

Surat Thani Branch
412/8 Talat Mai Road
Tumbon Talat,
Amphoe Mueang Surat Thani
Changwat Surat Thani 84000, Thailand

Tel : +66 (0) 7721-7907-10
Fax : +66 (0) 7721-7910
Operating hours:
Mondays till Friday
9am to 6pm

Phuket Branch
156/3 Phang Nga Road
Tumbon Taratyai,
Amphoe Mueang Phuket
Changwat Phuket 83000, Thailand

Tel : +66 (0) 7623-2906-9
Fax : +66 (0) 7623-2909
Operating hours:
Mondays till Friday
9am to 6pm

Hat Yai Branch
48/106 Phadungpakdee Road
Tumbon Hatyai, Amphoe Hatyai
Changwat Songkhla 90110, Thailand

Tel : +66 (0) 7435-4559-61
Fax : +66 (0) 7435-4561
Operating hours:
Mondays till Friday
9am to 6pm